

OWNERS MANUAL



GUANGZHOU JNJ SANITARY WARE CO., LTD.

TEL: 86-20-36460026

ADD: No.166, HUANGJINWEI INDUSTRIAL ZONE, SHIJING, BAIYUN, GUANGZHOU, CHINA

Table Of Contents

Introduction.....3

Important Safety Instruction.....4

Choosing a Location.....5

Site Preparation.....5

Installation.....6

Control System Instruction.....8

Spa Care and Maintenance.....9

Water Quality and Maintenance.....11

Appendix.....15

PRODUCT PAREMETERS

Model		SPA-629	Serial Number	
Structure Index	Dimension:	220×220×97cm		
Electric Index	Voltage	400V3N~/50Hz	Controller Model	GS-523DZ
	Current	17A	Panel Model	VL-801
	Power	6800W	Water Resistance Grade	IPX5
	Heater	220-240V~/3000W	Water Pump	220-240V~/2HP×2
	Circulating Pump	220-240V~/1HP×1	Air Pump	220-240V~/700W×1
	Light	12V~/5W	Ozone	220-240V~/5W

INTRODUCTION

Your choice of spa indicates that you are devoted to excellence. The manufacturer appreciates your patronage and takes pride in the tradition of quality spas that our company represents. We are confident that your new spa will provide you, your family and friends, with years of enjoyment and fulfill all your hydrotherapy needs.

In order to get the most enjoyment of your spa, we strongly suggest that you take the time to read through this manual before electrically connecting your spa and operate your spa. This will acquaint you with the safety procedures, installation methods, operating features, and maintenance, ensuring an enjoyable experience right from the start. The manufacturer has tried to anticipate all of your needs and desires. However, if you need any additional information, feel free to call the local dealer.

This manual was written to ensure the proper installation and use of your spa. Any modifications to the procedures outlined in this manual may result in your warranty being voided. Please take the time to read this manual to avoid any unnecessary problems with your brand new spa and equipment.

THIS MANUAL AND ITS CONTENTS ARE SUBJECT TO CHANGE WITHOUT NOTICE. ALTHOUGH WE HAVE PREPARED THIS MANUAL TO BE AS ACCURATE AND PRECISE AS POSSIBLE, WE WILL NOT BE LIABLE FOR LOSS, INJURY OR DAMAGES CAUSED BY IMPROPER INSTALLATION OR USE OF SPA OR MAINTAIN (IMPROPER OR OTHERWISE). WE ALSO NOT BE LIABLE FOR THE INJURY THAT SPA INSTALLED BY THE INSTALLER WITHOUT A QUALIFICATION.

MANUFACTURE RESERVES THE RIGHT TO CHANGE SPECIFICATIONS WITHOUT NOTICE.

IMPORTANT SAFETY INSTRUCTIONS

When installing your spa and using this equipment, basic safety precautions should always be followed. The following instructions are required by IEC 60335-1 standard. They contain important safety information we strongly urge you to read and apply. For your safety and the safety of others, it is vital that the following be mentioned:

- Do not permit children to use spa unless they are closely supervised at all times.
- Do not allow children to submerge their head under water.
- Set a comfortable water temperature and always confirm water temperature with an accurate thermometer before entering your spa.
- Pregnant woman should consult a physician before using spa. And using spa under the guidance of the doctor and Accompanied by the guardian.
- Slow moving/weak elderly or disabled persons should take care when using spa.
- People using medications and/or having any adverse medical history are not allowed to use spa .
- To avoid unconsciousness and possible drowning, do not use drugs or alcohol before or during the use of spa.
- Always cover spa and use safety locks to prevent accidents when the spa is not in use.
- The suction fittings in the spa are sized to match the specific water flow created by the pump/pumps. Should the need arise to replace the suction fittings or the pump/pumps, be sure that the flow rates are compatible.
- Do not use a wall switch, ground fault circuit interrupter, circuit breaker, fuse, or plugging and unplugging the spa as a means of turning on or off your spa for normal everyday use.
- Set the spa on a firm level (flat) surface. For floor recessed spas, install to permit access for servicing from above or below floor. Position spa to provide proper drainage, accessibility of electrical compartments. Do not set spa on blocks as structural damage may occur to spa.
- A wire connector is provided on this unit to connect a minimum (6mm²) solid copper conductor between unit and any metal equipment, metal enclosures of electrical equipment, or conduit, if that item is located within 5 feet (1.5m) of the unit. The wire connector must be grounded.
- Do not leave audio cover open. Replace audio components only with identical components.
- Do not connect any auxiliary components. For example additional speakers, headphones, etc. to the system.
- Maintain water chemistry/balance in accordance with dealer's instruction.
- The warning sign (yellow) below is packed with your new Spa. This sign must be posted in a prominent place in close proximity to the spa installation site immediately upon completion of spa installation. It is extremely important that this sign be permanently placed in clear view of any persons using the spa. Occasional spa users may not be aware of some of the dangers hot water poses to pregnant women, children, and people under the influence of alcohol. If you did not receive a warning sign or your sign has become damaged, please contact your spa dealer.



HYPERTHERMIA

Prolonged immersion in water that exceeds normal body temperature can lead to hyperthermia. Hyperthermia occurs when the internal temperature of the body reaches a level several degrees above the normal body temperature of 98.60° F (37.0° C). The symptoms of hyperthermia include drowsiness, lethargy, and an increase in the internal temperature of the body. The effects of hyperthermia include:

- Unawareness of impending hazard;
- Failure to perceive heat;
- Failure to recognize the need to exit spa;
- Physical inability to exit spa;
- Fetal damage in pregnant women; and unconsciousness and danger of drowning.

CHOOSING A LOCATION

Your spa can be installed indoors or out, on the ground, in the ground or half-and-half. The following information will assist you in choosing the right location for your individual needs. When making your decision, always remember that the spa can be enjoyed year-round, indoors or out, regardless of the climate.

Outdoor Location

In selecting the ideal outdoor location for your spa, we suggest that you take into consideration:

- The proximity to changing area and shelter (especially in colder weather conditions).
- The pathway to and from the spa (free of debris, dirt, leaves as not to be tracked into spa).
- The closeness to trees and shrubbery (leaves and birds could create extra work).
- A sheltered environment (less wind, weather exposure resulting in lowered operation and maintenance costs).
- It is preferable not to place the spa under eave because the water drop/flow will shorten the servicing life of the cover.

Indoor Location

In selecting the ideal indoor location for your spa, you must choose proper flooring area for spa.

The following you must take into consideration:

- Be sure your spa will fit into the space you have chosen. Proper access into the home is needed to move the spa into place.
- Ventilation or window may be needed because of the humidity from the spa. In most cases, a spa cover is sufficient.
- Though most homes meet the requirement of 80lbs per square foot, be sure to check the load carrying capabilities of the floor you will be installing your spa on (manufacturer not responsible).
- Insure you have proper drainage in the event of a leak or water spill due to over load of spa with people causing water damage (manufacturer not responsible.)
- In case of maintenance problems leave enough room around the spa to work.

SITE PREPARATION

Because of the combined weight of the spa, water and users, it is extremely important that the base upon which the spa rests be smooth, flat, level and capable of uniformly supporting this weight. Without shifting or settling, for the entire time the spa is in place. If the spa is placed on a surface which does not meet these requirements, damage to the skirt and/or the spa shell may result. Damage caused by improper support is not covered under warranty. It is the responsibility of the spa owner to assure the integrity of the support at all times.

We strongly recommend that a qualified, licensed contractor prepare the foundation for your spa. The manufacturer recommends a poured, reinforced concrete slab with a minimum thickness of 4 inches (10cm).

The spa must be installed in such a manner as to provide drainage away from the spa. Placing the spa in a depression without provisions for proper drainage could allow rain, overflow and other casual water to flood the equipment.

Install so as to permit access to the equipment, either from above or below, for servicing. Make certain that there are no obstructions which would prevent removal of the cabinet side panels and access to the inner components.

Above-ground Installation

For best results, we recommend the installation of a level concrete pad:

- Dig out and level the ground 20-30 cm (8-12 in.) below your desired base level;
- Install 10-15 cm (4-6 in.) of crushed stone;
- Next, install 10-15 cm (4-6 in.) of poured concrete;
- Level the concrete and apply a broom-type finish;
- We recommend that the pad be made 15 cm (6 in.) large than the spa on three sides, and 1 m (3 ft.) larger on the side where the access steps.

In-ground or Partial In-ground Installation

- It is sufficient to ensure that the base of the hole or cavity created for the spa has a dry, stable, compacted level base and proper drainage;
- It is necessary that a poured level concrete base, complete with concrete footings, be installed as outlined in the section **Above-ground Installation**.
- We recommend that the base be made 60 cm (24 in.) large than the spa on three sides, and 1 m (3 ft.) larger on the side where the access exit or ladder.
- Always ensure that there is good drainage, via a properly designed French drain system and/or a sump pump, to prevent ground water flooding damage to the support equipment or spa structure.

NOTE: SEE APPENDIX FOR SPA SIZE.

INSTALLATION

Preparation

- At least two persons are necessary for the assembly.
- Necessary tools for assembly are including: level meter, cross screwdriver, vise tool , multimeter , Multi-functional screwdriver, diagonal plier, pipe wrench tool, etc.
- Additional materials for the installation are including: a GFCI(Ground Fault Circuit Interrupter), cable etc.

Unloading And Handling Instruction

Each spa is factory strapped onto a wood skid. Each wood skid has a clearance width to allow movement of the spa on its side through alley-ways. Where this is possible, the use of a forkman to lift the spa from the truck or trailer over the house to the patio or yard is often a simple and economical option. The following you must pay attention to:


when your spa is stow on end, you must make sure that your forkman's arm already cross the two-third line of the wood skid. As picture:




When your spa is a swimming spa which is laid flat. Manufacturer recommend you to unload and handle as the following pictures:

UNLOAD SWIM SPA INSTRUCTION


1st step:
using a lashing strap
to strap with the plywood plate

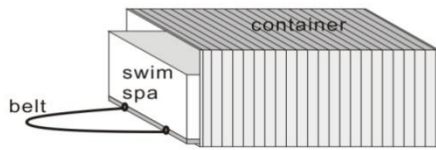


3rd step:
release the lashing strap,
drive forklift to between the steel
frame and container gate,
lift up the swim spa with plywood
plate to about 300mm high,
ask the container move away,
the swim spa will be complete
out of the container,

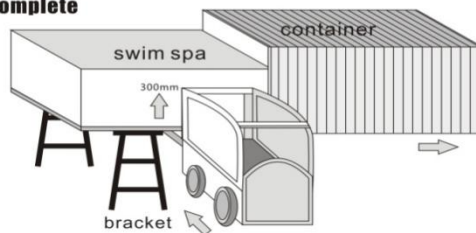

2nd step:
using forklift to pull swim spa out
(the lashing strap was tied the fork of forklift,
put the steel frame to support the swim spa
once half of it is out of the container)

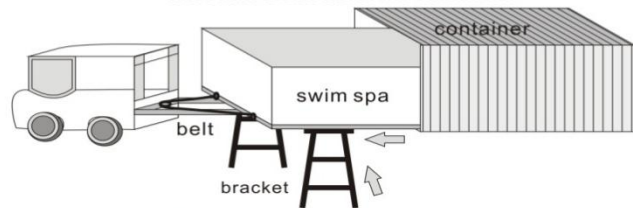

4th step:
lay swim spa down level ground;
or put the swim spa without plywood
plate on two flatbeds.
Move swim spa to anywhere.

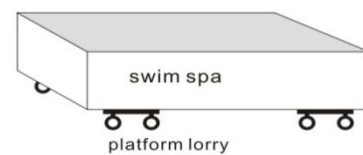

NOTICE:

- Make sure that there is sufficient assistance to gently slide the spa off the dolly or cart to the support base without any damage.
- Damage caused during transportation or by improper handling is not covered by the factory warranty.

Installation Instructions

- A suitability of installer with qualification who shall be able to demonstrate to the relevant authorities their awareness and competence in application of National Regulatory requirements for safety, electrical and water supply/disposal.
- The electrical installation, which shall be in accordance with National Regulatory requirements.
- The spa must connect to a GFCI. Manufacturer recommend the GFCI be attached to the end of the spa's electrical cord. The GFCI must be installed by a licensed, qualified electrician. GFCI devices must meet all national and local electrical cord. Press the TEST button and RESET button to test and reset the GFCI.
- The means of the power supply cable connection meet the controller manual.
- A appropriate mean to connect the drainer must be used.

Equipotential bonding

A permanent equipotential grid is required around the perimeter of the pool extending 3 in. beyond the side of the pool in order to eliminate voltage gradients in the pool area prescribed. All the metallic parts in the area, including the pool are required to connect to the equipotential grid. There is a metal equipotential bonding bar on the stainless steel frame of the pool, please use a 4 mm² copper conductor to connect the equipotential bonding bar to the area equipotential grid permanently.

Disconnection

Disconnection from the supply mains having a contact separation in all poles that provide full disconnection under overvoltage category III conditions must be incorporated in the fixed wiring in accordance with the national wire rules.

Encouraging statement

The installer and first owner of the spa to make the instructions available to subsequent owners and users.

CONTROL SYSTEM INSTRUCTION

NOTE:

The function and connection of the controller meets the corresponding model of controller manual.
The function and parameter of the spa meet the APPENDIX.

Display Message

Message	Meaning	Action Required
	No message on display. Power has been cut off to spa.	The control panel will be disabled until power returns. The system reset the time of day on each power up. Spa settings are preserved.
OHH	Overheat"- The spa has shut down. One of the sensors detected 118degree F (approximately 47.8degree C) at the heater.	Do not enter the water. Remove the spa cover and allow the water to cool. Once the heater has cooled, reset by pushing any button. If the spa does not reset, shut off the power to the spa and call the local dealer or service.
OHS	Overheat"- The spa has sh ut down. One of the sensors detected that the spa water is 110egree F(approximately 43.3 degree C).	Do not enter the water. Remove the spa cover and allow the water to cool. At 107 degree F (approximately 41.7 degree F), the spa should automatically reset. If the spa does not reset, shut off the power to the spa and call the local dealer for service.
ICE	Ice" - Potential freeze condition detected.	No action required. The pumps and the blower will automatically activate regardless of the spa status.
SnA	Spa is shut down. The sensor that is plugged into the "Sensor B" jack is not working correctly.	Check the sensor "B" plug connection to circuit board. If the problem persists, contact the local dealer or service. (The problem may appear temporarily in an overheat situation and disappear when the heater cools).
SnS	Sensors are out of balance. If this is alternating with temperature, it may just be temporary condition. If the display shows only this message (periodically blinking), the spa is shut down.	If the problem persists, contact the local dealer or service.
HFL	A substantial difference between sensors was detected. This could indicate a flow problem.	Check water level in spa and the circulation system. Add water if necessary. Be sure that slide-valves are open. Make sure the circulation pump have been primed and has power. Change the new filter cartridge.
LF	Persistent low flow problems. Displays on the fifth occurrence of the "HFL" message within 24 hours. Heater is shut down, but other spa functions to run normally.	Follow actions required for "HFL" message. Heating capacity of the spa will not reset automatically; you may press any button to reset or cycle the power off and on.
Dr	Inadequate water detected in heater. Displays on third occurrence of "dr" message. Spa is shut down for 15 minutes.	Check water level in spa. Add water if necessary. Be sure that slide-valves are open. Make sure the circulation pump have been primed and has power. On the third consecutive occurrence of the dr message (without a successful heating cycle in between) the panel will display dr4.
Dry	Inadequate water detected in heater. Displays on third occurrence of "dr" message. Spa is shut down and will not reset in 15 minutes.	Check water level in spa. Add water if necessary. Be sure that slide-valves are open. Make sure the circulation pump have been primed and has power. Press any button to reset.
Pr	When your spa is first activated, it will go into Priming mode.	See the 24 hour circulation pump operation. The Priming mode will last for up to four minutes and then the spa will begin to heat and maintain the water temperature in Standard mode.
-F -C	Temperature unknown Temperature unknown	After 6minutes Pr mode, the temperature will be displayed. After 6minutes Pr mode, the temperature will be displayed

Periodic Reminder Messages

Press the “Mode” button to reset a displayed reminder.

Message	Frequency	Action Required
rPH	Every 7 days	Test and adjust pH chemical levels (see pages 11-13)
rSA	Every 7 days	Test and adjust sanitizer chemical level (see pages 11-13)
rCL	Every 30 days	Remove, clean and install filter (see page 10)
rt9	Every 30 days	Test and reset GFCI (see page 7)
rdr	Every 90 days	Drain and refill spa (see page 9)
rCO	Every 180 days	Clean and condition cover, pillows (see pages 10)
rtr	Every 180 days	Clean and condition cabinet (see page 10)
rCH	Every 365 days	Install new filter (see page 7)

SPA CARE AND MAINTENANCE

Draining and Refilling Your spa

To prevent damage to spa's components, you must fill the SPA to the water level with municipal drinking water before turn on power. Turn off power before draining it. Do not turn the power back on until your spa has been refilled. Depending on your spa model, the drain valve is located on the left or right side of the spa. The drain valve is flush mounted to the spa frame below. To drain spa, pull the spout out, leaving the exterior end cap on. Once extracted the drain valve will stay in the closed position. Remove the end cap and attach garden hose to exposed threads. After the garden hose is installed, push the spout back in halfway to actuate the drain. Drain valve will drain approximately 5 gallons of water per minute.

NOTICE:

- During draining the pool, please make sure no person stay in the pool. Please make sure the draining water not reaching the power supply or any power cable of the surrounding electrical equipments.
- We recommend to use a standard garden hose to fill water, turning the tap slightly to prevent damage to the pool surface by a jerking hose connection.
- The recommended water level of filling is at least 5cm higher than the highest jet of the pool, or reaching the water level mark before turn on power.

Filter cleaning and Cartridge Replacement.

The Filter cartridges should be checked periodically. In normal use, check them at least once a month. Keep them clean. An obstructed filter cartridge reduces water quality and inhibits proper system performance. According to the following process:

- Press “warm” or “cool” button then “Jets 2” button. It will temporarily turn off all spa functions and put the spa in standby mode.
- Removable filter cartridges are located inside the filter well. To remove them lift the filter lid, then rotate each filter cartridge counterclockwise to unthread from mating wall fitting. Remove both cartridges from filter well.
- Use a garden hose with straight flow nozzle to wash down the filter element. Work from the top down, holding the nozzle at 45 degree angle, and wash all the pleats with emphasis between pleats. Rinse until all dirt and debris is gone.
- Re-install filter. Press any button to exit standby mode.

Corresponding replacement cartridges may be purchased from the local dealer.



Filter Cartridge

Care of The Spa

Spa Shell

Your spa shell is made of acrylic. Stains and dirt generally will not adhere to the surface. Use of a soft rag or a nylon scrubber should remove most dirt. See your dealer for the best product to use. The only products which have passed the manufacturer's test like Soft Towel and Windex can be used to clean spa.

Sodium bicarbonate (baking soda) can also be used for minor surface cleaning. Always thoroughly rinse off any spa shell cleaning agent with fresh water.

NOTICE:

- Most household chemicals are harmful to your spa shell.
- Iron and copper in the water can stain the spa shell if allowed to go unchecked. Ask the local dealer about a stain and scale inhibitor to use if your spa water has a high concentration of dissolved minerals.
- The use of alcohol or any household cleaners other than those listed to clean the spa shell surface above is not recommended. Do not use any cleaning products containing abrasives or solvents since they may damage the shell surface. Never use harsh chemicals.
- Damage to the shell by the use of harsh chemicals is not covered under the warranty.

WARNING: Some surface cleaners and water treatment biocide contain eye and skin irritants. Keep all cleaners out of the reach of children and use care when applying.

Free Cabinet

The spa consists of a rigid polymer that combines the durability of plastic with the beauty of a redwood looking cabinet. The cabinet will not crack, peel, blister or delaminate. Cleaning consists of simply spraying the cabinet with a mild soap and water solution to remove any stains and residue.

Pillow

Remove and clean the headrest pillows as needed with soapy water using a cloth or soft-bristle brush. Always remove the pillows when adding chemical shock treatment to the spa water. The pillows can be returned to the spa when sanitizer reading drops below 5ppm. Never attempt to remove the pillows by pulling on them. Grasp pillow with finger tips and gently pry outward from spa shell.

Spa Cover

To clean and maintain the vinyl cover:

- Remove the cover from the spa and gently lean it up against a wall or fence.
- Using a garden hose, spray the cover to loosen and rinse away any dirt or debris.
- Using a sponge and/or a soft bristle brush, and using a very mild soap solution (one teaspoon dishwashing liquid with two gallons of water), or baking soda (sodium bicarbonate), scrub the vinyl top in a circular motion. Do not let the vinyl dry with a soap film on it before it can be rinsed clean.
- Scrub the cover's perimeter and side flaps. Rinse clean with water.
- Rinse off the underside of the cover with water only (use no soap), and wipe it clean with a dry rag.
- To condition the cover after cleaning, apply a thin film of vinyl cleaner to the surface and buff to a high luster.

NOTICE:

- Do not remove snow buildup to avoid breakage of the foam core from the additional weight of the snow.
- Do not lock cover locking straps to secure the cover when the spa is not in use.
- Do not walk or stand on top of cover (unless you own a "walk-on-cover").
- Do not drag or lift the spa cover using either of the flaps, or the cover lock straps.

Winterizing Your Spa

During the cold weather you may not wish to use your spa outside. In this case you may move it to a heated area, and leave it until the weather warms up. Or the following steps should be used to protect your spa from freezing:

- Disconnect the spa from the power supply.
- Remove the screws holding your spa excess panel door.
- Open the drain valve, open the pumps plugs, and the spa will drain by gravity flow.
- Remove the filter cartridge, then clean and store in a dry place.
- Attach a wet/dry shop vac (capable of blowing air as well as vacuuming) into the filter housing.
- Turn blower on and allow it to blow out any water remaining in the plumb lines. (Should take no more than 5 minutes).
- Reinstall the filter housing.
- Use the shop vac to remove water inside spa inhaled through jets.
- Use a shop vac and clean towel and remove any remaining water from bottom of spa until dry.

- Leave the drain open.
- Close the spa cover and fasten with tie down safety locks.

WATER QUALITY AND MAINTENANCE

The quality of the water in your spa is important and must be kept clean. Your program will vary depending on your water's mineral content, and how often you use your spa, and the amount of people using it.

General Information - The three fundamental areas of water maintenance include Water Filtration, Chemical Balance/pH Control and Water Sanitation.

Water sanitation is the owner's responsibility of maintaining clean quality water in your spa, and is achieved through the regular and periodic (daily), addition of an approved sanitizer if necessary. The sanitizer will chemically control the bacteria and viruses present in the fill water or introduced during the use of the spa. Bacteria and viruses can not grow quickly in under sanitized spa water.

The water's chemical balance and pH control are also your responsibility. You will have to add chemicals to maintain proper levels of Total Alkalinity (TA), Calcium Hardness (CH) and pH. Proper water balance and pH control will minimize scale buildup and corrosion of metals, extend the life of the spa, and allow the sanitizer to work at maximum efficiency.

Methods For Testing Spa Water

Accurate water testing and analysis are an important part of effectively maintaining your spa water. You must have the ability to test for:

- Total Alkalinity (TA).
- pH.
- Calcium Hardness (CH).
- Sanitizer.

Two types of testing methods are recognized and recommended:

- Reagent Test Kit is a method which provides a high level of accuracy. They come in either liquid or tablet form.
- Test Strips are a convenient testing method used by many spa owners. Keep in mind that test strips are susceptible to heat and moisture.

Basic Chemical Safety

When using chemicals, always read the labels carefully and follow directions. Though chemicals protect you and your spa when used correctly, they can be hazardous in concentrated form. Observe the following guidelines:

- Allow only a responsible person to handle spa chemicals. **KEEP OUT OF THE REACH OF CHILDREN.**
- Accurately measure the exact quantities specified, never more. Do not overdose your spa.
- Handle all containers with care. Store in a cool, dry well ventilated place.
- Always keep chemical containers closed when not in use. Replace caps on their proper containers.
- Don't inhale fumes, or allow chemicals to come in contact with your eyes, nose, or mouth. Wash your hands immediately after each use.
- Follow the emergency advice on the product label in case of accidental contact, or if the chemical is swallowed. Call a doctor or the local Poison Control Center. If a doctor is needed, take the product container along with you so that the substance can be identified.
- Don't let chemicals get on surrounding surfaces or landscaping. Rinse off with fresh water if spilled.
- Never smoke around chemicals. Some of the fumes can be highly flammable

Adding Spa Chemicals

- Fold back the spa cover. Carefully remove and set aside the filter lid.
- Push the **Jet1** button to turn on the pump 1 to provide high water flow.

- Carefully measure the recommended amount of chemical and slowly pour it into the filter compartment. Use care not to splash chemicals on your hands, eyes, or on the spa shell surface or cabinet.
- Replace filter lid and run spa for 10 minutes on high speed. Re-install spa cover.

NOTICE: After administering a super chlorination treatment or non-chlorine shock to your spa, leave the cover open for a minimum of 20 minutes to allow the oxidizer gas to vent. A high concentration of trapped oxidizer gas which may exist as a result of the shock treatment (not daily sanitation) may eventually cause discoloration or vinyl degradation to the bottom of the cover. This type of damage is considered chemical abuse and is not covered under the warranty.

Balancing Total Alkalinity (TA)

- The recommended Total Alkalinity (TA) for your spa water is 125-150ppm.
- Total Alkalinity is measure of the total levels of carbonates, bicarbonates, hydroxides, and other alkaline substances in the water. TA is referred to as the water's "pH buffer". It's a measure of the ability of the water to resist changes in pH level.
- If the TA is too low, the pH level will fluctuate widely from high to low. Fluctuations in pH can cause corrosion or scaling of spa components. Low TA can be corrected by adding pH/Alkalinity UP (sodium hydrogen carbonate).
- If the TA is too high, the pH level will tend to be high and may be difficult to bring down. It can be lowered by adding pH/Alkalinity down (sodium bisulfate).
- Once the TA is balanced, it normally remains stable, although the addition of more water with a high or low alkalinity will raise or lower the TA reading of the water.
- When the Total Alkalinity is within the recommended range, proceed.

Balancing Calcium Hardness (CH)

- The recommended Calcium Hardness (CH) level for your spa is 150-200ppm.
- Calcium Hardness is a measure of the total amount of dissolved calcium in the water. Calcium helps control the corrosive nature of the spa's water. That's why calcium-low water (commonly know as "soft" water) is not recommended. It is very corrosive to the equipment, and can cause staining of the spa shell. If the calcium level is too low, we recommend using Calcium Increaser to bring the calcium hardness level to within the recommended range.
- If the CH is too high (commonly know as "hard" water), formation of scale on the spa's shell surface and equipment can result. CH can be decreased by dilution - a mixture of 75% hard and 25% soft water will be a good starting point. If soft water is not available, or practical for you, a stain and scale control such as Scale Defense should be added to the spa water, according to instructions on its label.
- Once the CH is balanced, it normally remains stable, although the addition of more water with a high or low calcium content will raise or lower the CH reading of the water.
- When the Calcium Hardness is within the recommended range, proceed.

Balancing The pH

- The recommended pH level for your spa water is 7.4-7.6.
- The pH level is the measure of acidity and alkalinity. Values above 7 are alkaline; those below 7 are acidic.
- Maintaining the proper pH level is extremely important:
 - 1) Optimizing the effectiveness of the sanitizer.
 - 2) Maintaining water that is comfortable for the user.
 - 3) Preventing equipment deterioration.
- If the spa water's pH level is too low, the following may result:
 - 1) The sanitizer will dissipate rapidly.
 - 2) The water may become irritating to spa users.
 - 3) The spa's equipment may corrode.
- If the pH level is too high, the following may result:
 - 1) The sanitizer is less effective.
 - 2) Scale will form on the spa shell surface and the equipment.
 - 3) The water may become cloudy.

4) The filter cartridge pores may become obstructed.

METHOD: If the pH level is too low, it can be increased by adding pH/Alkalinity Up (sodium hydrogen carbonate) to the spa water. If the pH is too high, it can be decreased by adding pH/Alkalinity Down (sodium bisulfate) to the spa water.

NOTICE: After adding pH/Alkalinity Up (sodium hydrogen carbonate) or pH/Alkalinity Down (sodium bisulfate), wait at least two hours before testing the water for pH. Measurements taken too soon may not be accurate.

It is important to check the pH on a regular basis. The pH will be affected by the bather load, the addition of new water, the addition of various chemicals, and the type of sanitizer used. When the pH is within the recommended range, proceed.

Maintaining Sanitizer Level

Sanitizer is extremely important for killing algae, bacteria and viruses, and preventing unwanted organisms from growing in the spa. At the same time, you don't want too high a sanitizer level, or it can irritate your skin, lungs, and eyes.

Always maintain the sanitizer level in your spa at the recommended level for each type of sanitizer.

Ozone

Spa's Ozone System drastically reduces the use of chemicals in the water. This aids in maintenance is that the amount of harsh chemicals and frequency with which they are used is lowered.

NOTE: Call the local dealer to provide you with maintenance service if replacement of ozonator or tubing is required.

Vacation Care Of Spa

Follow these instructions to ensure that the water quality of your spa is maintained:

For Short Periods (3 to 5 days)

- Adjust the Ph
- Sanitize the water
- Lock cover for safety

For Long Periods (5 to 14 days)

- Set temperature to its lowest level approximate water temperature of 80.0F
- Adjust the pH
- Sanitize the water
- Lock cover for safety

Return Procedures

- Sanitize the water following shock procedures
- Return water temperature to original setting
- Insure chlorine level had dropped below 5.0ppm

NOTE: If you plan on not using your spa for periods exceeding 14 days, you may ask a family member or neighbor to assist with your spa maintenance, and if not available you will need to drain or winterize spa.

SPA WATER MAINTENANCE & TROUBLESHOOTING		
Problem	Probable Causes	Solutions
Cloudy Water	Dirty Filter/s Excess oils / organic matter Improper sanitization Suspended particles /organic matter	Clean filter or replace. Shock spa with sanitizer. Add sanitizer. Adjust pH and/or alkalinity, run jet pump(s) and clean filter.
	Overused or old water	Drain and refill spa.
Water Odor	Excessive organics in water Improper sanitization Low pH	Shock spa with sanitizer. Add sanitizer. Adjust pH to recommended range.
Chlorine Odor	Chloramine level too high Low pH	Shock spa with sanitizer Adjust pH to recommended range.

Musty Odor	Bacteria or algae growth	Shock spa with sanitizer – if problem is visible or persistent, drain, clean and refill spa.
Organic buildup / scum ring around spa	Build-up of oils and dirt	Wipe off scum with clean rag- if severe, drain the spa, use a spa surface and tile cleaner to remove the scum, and refill spa.
Algae Growth	High pH Low sanitizer level	Adjust pH. Shock spa with sanitizer and maintain sanitizer level.
Eye Irritation	High pH Low sanitizer level	Adjust pH. Shock spa with sanitizer and maintain sanitizer level.
Skin Irritation / Rash	Unsanitary water Free chlorine level above 5ppm	Shock spa with sanitizer and maintain sanitizer level. Allow free chlorine level to drop below 5ppm.
Stains	Total alkalinity and/or pH too low High iron or copper in source water	Adjust total alkalinity and/or pH. Use a metal deposit inhibitor.
Scale	High calcium content in water – total alkalinity and pH too high.	Adjust total alkalinity and pH– If scale requires removal, drain the spa, scrub off the scale, refill the spa and balance the water.

NOTE: Water Terminology:

Bromamines: Compounds formed when bromine combines with nitrogen from body oils, perspiration, etc. Unlike chloramines, bromamines have no pungent odor, and are effective sanitizers.

Bromine: A halogen sanitizer (in the same chemical family as chlorine). Bromine is commonly used in stick, tablet, or granular form.

Calcium Hardness: The amount of dissolved calcium in the spa water. This should be approximately 150-220ppm. High levels of calcium can cause cloudy water and scaling. Low levels can cause harm to the spa equipment.

Chloramines: Compounds formed when chlorine combines with nitrogen from body oils, urine, perspiration, etc. Chloramines can cause eye irritation as well as having a strong odor. Unlike bromamines, chloramines are weaker, slower sanitizers.

Chlorine: An efficient sanitizing chemical for spas.

Chlorine (or Bromine) Residual: The amount of chlorine or bromine remaining after chlorine or bromine demand has been satisfied. residual is therefore the amount of sanitizer which is chemically available to kill bacteria, virus and algae.

Corrosion: The gradual wearing away of metal spa parts, usually caused by chemical action. Generally, corrosion is caused by low PH or by water with levels of TA, CH, pH or sanitizer which are outside the recommended ranges.

DPD: The preferred reagent used in test kits to measure the Free Available Chlorine.

Halogen: Any one of these five elements: fluorine, chlorine, bromine, iodine, and astatine.

MPS: MPS is the non-chlorine oxidizer used with the purification system.

Nitric Acid: The formulation of nitric acid, a highly corrosive chemical, is a byproduct of the ozone generating process. Nitric acid is produced in very small quantities and is readily dissolved in the water stream with ozone.

Oxidizer: The use of an oxidizing chemical is to prevent the buildup of contaminants, maximize sanitizer efficiency, minimize combined chlorine and improve water clarity.

Ozone: Ozone is a powerful oxidizing agent which is produced in nature and artificially by man. Ozone forms no byproducts of chloramines (ozone actually oxidizes chloramines) and will not alter the water's pH.

Pathogen: A microorganism such as bacterium that cause disease.


pH: The measure of the spa water's acidity and alkalinity. The recommended pH for the spa water is 7.4 to 7.6. Below 7.0 (considered neutral), the spa water is too acidic and can damage the heating system. Above 7.8, the water is too alkaline and can result in cloudy water, and scale formation on the shell and heater.

Reagent: A chemical material in liquid, powder, or tablet form for use in chemical testing.

Sanitizer: Sanitizers are added and maintained at recommended residuals to protect bathers against pathogenic organisms which can cause disease and infection in spa water.

Scale: Rough calcium-bearing deposits that can coat spa surfaces, heaters, plumbing lines and clog filters. Generally, scaling is caused by mineral content combined with high pH. Additionally, scale forms more readily at higher water temperatures.

JNJ SPA - 629 Dimensions & Specifications

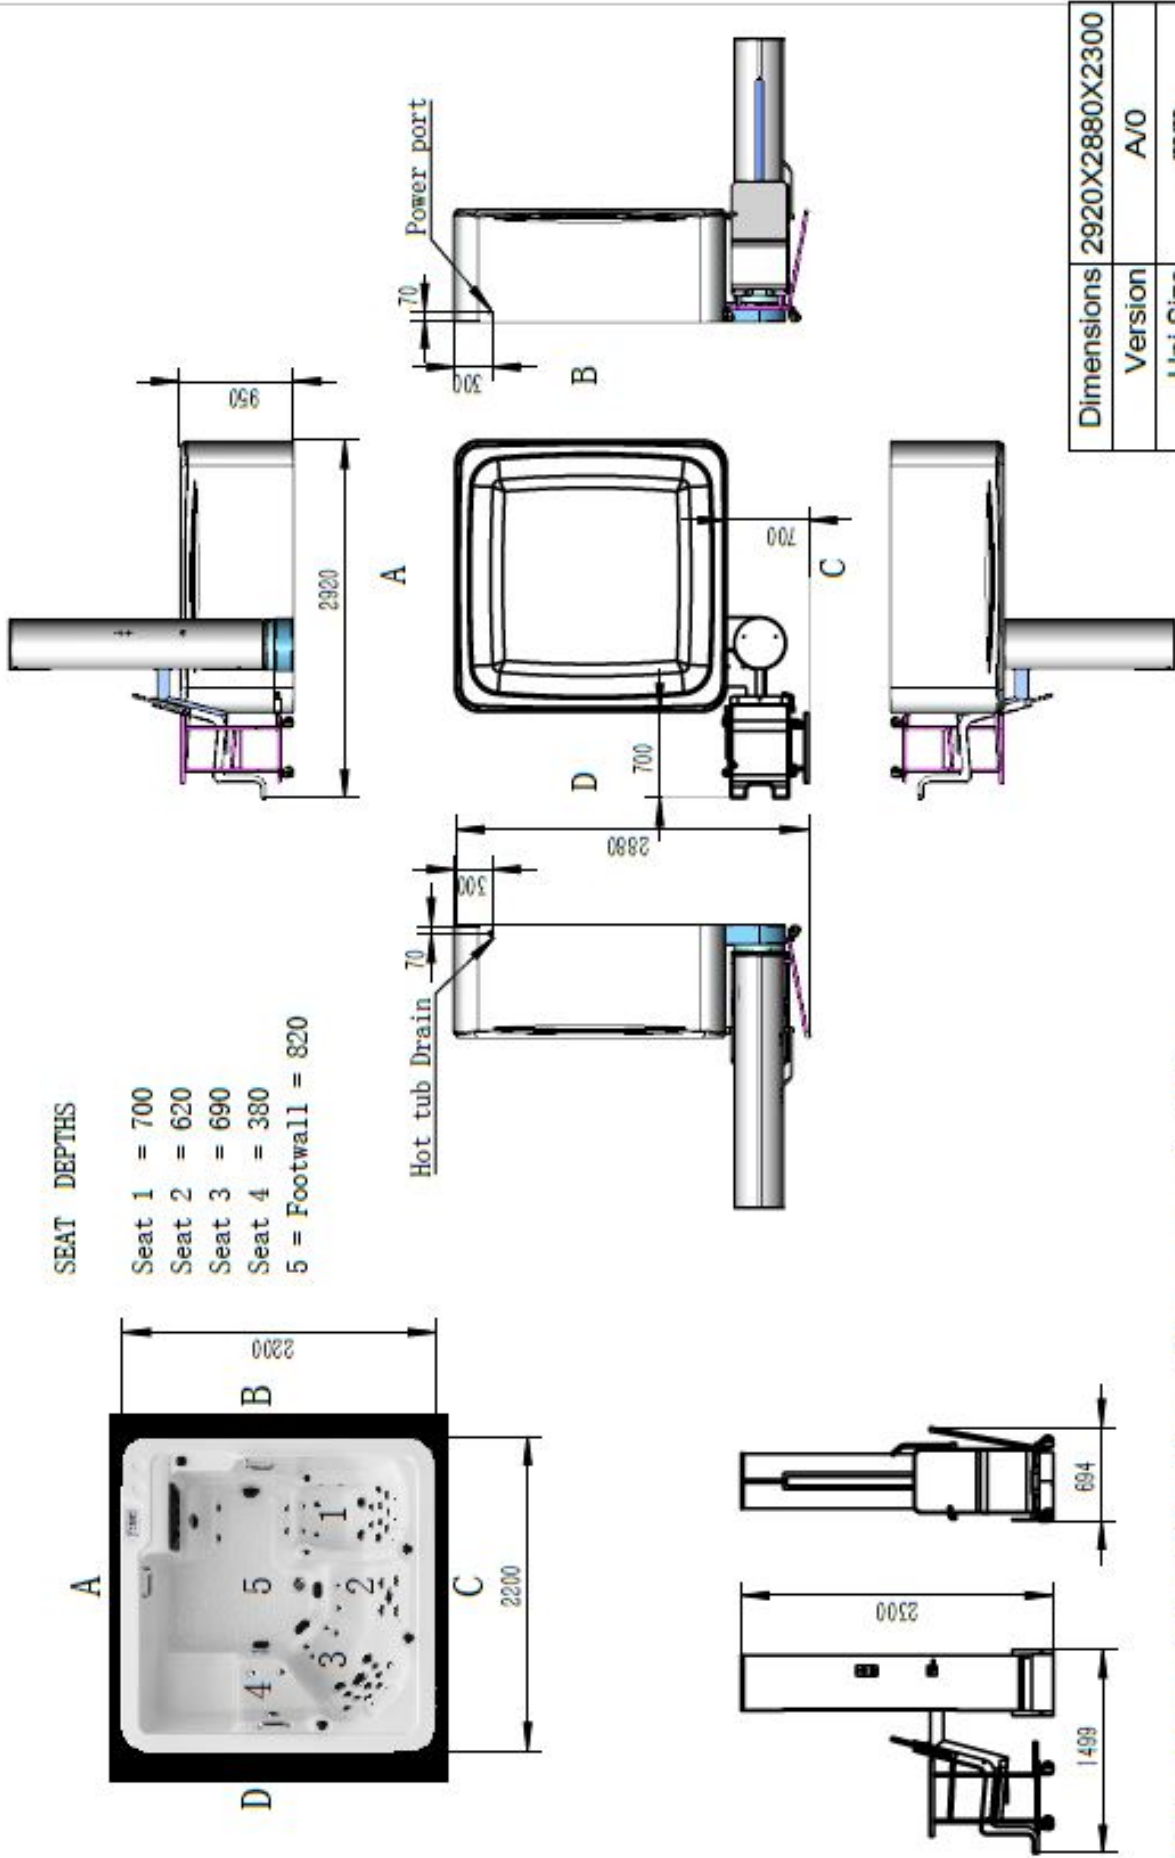

Dimensions	2920X2880X2300
Version	A/0
Uni.Size	mm
Date	17/10/2018

All Dimensions & Specifications Tolerance : $\pm 5-10\text{mm}$